


## TOTALE - Installation tip




### Initial installation:

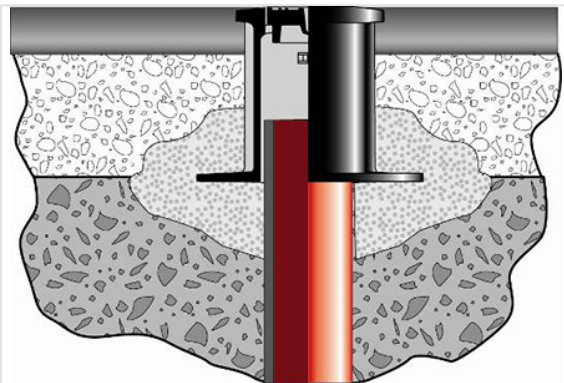

- Compact at support level
- Cut the tube lengthening-piece.
- To clean well the tube lengthening-piece until the operating nut.
- To level.
- To maintain in place with concrete, cement or similar sand-gravel mix.

**Roadway repair work:**

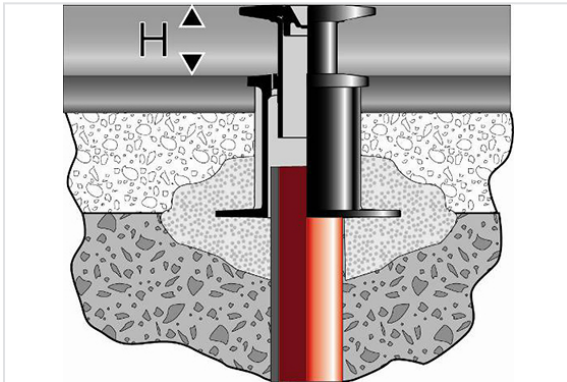

- Clean.
- To check the report of cleanliness of the tube lengthening-piece until the operating nut.
- Put in place the extension by sliding in the surface box.
- To maintain in place with concrete, cement or similar sand-gravel mix.
- To leave the head of the extension slightly more highest than the level of the final surfacing final so that this one is printed in the surfacing.

Extension height H mm	Totale mm	Totale Maxi mm
Maxi	115	340
Mini	22	15

**Nota:** The TOTALE and TOTALE MAXI surface boxes lids aren't usable on their extension which are delivered with their own lid.

*The information on this sketch is, to the best of our knowledge correct at the time of printing. However Saint-Gobain are constantly looking at ways of improving their products and services therefore reserve the right to change without prior notice, any of the data shown. Any orders placed will be subject to our Standard Conditions of Sale, available on request.*